

 
# Mount Adapter EF-NEXII

## Instructions User manual

Thank you for purchasing a **Protama** product.

The Lens Mount Adapter EF-NEX II is designed to allow Sony E-mount series lenses to be used with E-mount lens compatible interchangeable-lens digital cameras lenses. Before using this adapter, please make sure that the camera and the lens is compatible.


### Nomenclature

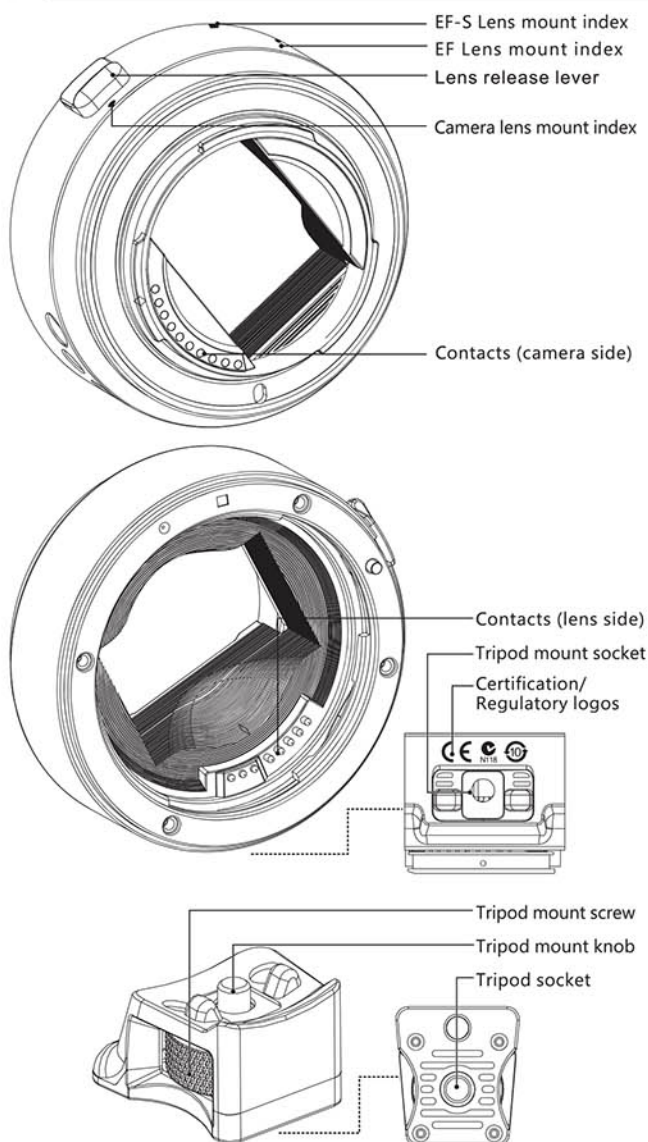

### Attentions

- This adapter is connected to the lens and also affect the performance of the lens.
- 1. If the adapter cannot work on NEX series cameras, Please updated the camera to 04 or up version.
- 2. After set the adapter on the EF-NEX II lens, Be remember to set the M mode change to A mode. Please restart the camera if it cannot Auto focus.
- 3. It will not affect the performance of lens after seting the adapter ring on the lens.
- 4. Please use the switch on the lens to set the lens function. If the settings in the camera menu and set on the lens, and is subject to the settings on the lens.
- 5. When you use the lens is much heavier than the camera, be sure to move the camera and shoot holding the lens. Will increase the minimum focusing distance of the lens adapter is connected, so the maximum magnification and field of view may change.
 
### Mounting and Detaching the Adapter

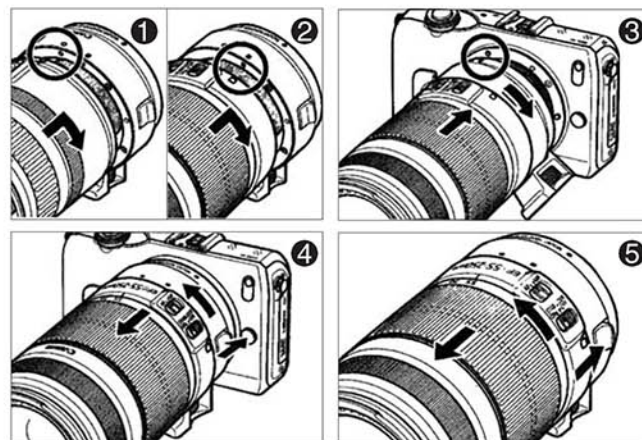

#### Mounting Procedures

1. Attach the EF lens to the EF mount side of the adapter.  
Insert the lens into the adapter by aligning the mount index found on the EF lens (red circle) with the same mark found on the adapter, and turn the EF lens clockwise until you hear a click. (fig. 1)  
When attaching an EF-S mount index marks (white squares) and turn the lens clockwise. (fig. 2)
2. Mount the adapter to the camera.  
Insert the adapter into the camera by aligning the Sony E-mount lens mount index found on the adapter (white circle) with the same mark found on the camera, and turn the adapter counter clockwise until you hear a click. (fig. 3)

#### Detaching Procedures

1. Turn the camera OFF, and detach the adapter from the camera while the EF lens is still attached to it.  
Turn the adapter counter clockwise while pressing the camera's lens release button. (fig. 4)  
Detach the adapter once it has stopped turning.
2. Detach the EF lens from the adapter.  
Turn the EF lens counter clockwise while pushing the lens release lever found on the adapter. (fig. 5)  
Detach the EF lens once it has stopped turning.
3. Precautions when using this adapter with a tripod.  
When shooting with a tripod, do not use the camera's tripod mount socket while the adapter is attached. Be sure to use the tripod mount included with the adapter.

### Attaching the tripod mount

1. Attach the included tripod mount to the adapter by firmly turning the tripod mount knob.  
Please make sure that the tripod mount is facing in the correct direction in relation to the adapter.
2. Attach the tripod using the tripod mount socket.  
Securely attach the tripod while firmly holding the adapter.



When using a tripod with EF lenses that are equipped with a tripod mount, such as super telephoto lenses, please be sure to use it to mount the lens to the tripod.

### Specifications

Compatible lenses	EF series lenses
Compatible cameras	E-mount series
Front mount	Canon EF mount compliant
Rear mount	Sony E-mount compliant
Tripod Socket	Cu 1/4" × 1
Max. Diameter and Length	66.6 × 26 mm
Weight	Approx. 125 g
Front Cap	Camera Cover
Rear Cap	Lens Dust Cap

The size and weight listed are for the adapter only. All data listed is measured according to Canon standards. Specifications subject to change without notice. For more information, please visit [www.protama-digital.com](http://www.protama-digital.com)



# EF-NEX II 卡口轉接環 使用說明書

 
感謝您購買天馬產品！

天馬鏡頭轉接環EF-NEXII的設計可將EF系列鏡頭與E卡口系列兼容的可換鏡頭數碼相機搭配使用。

在使用此轉接環之前，請確保相機與鏡頭兼容。

使用本產品前，請詳細閱讀使用說明書，使您對產品更熟悉并掌握正確的操作方法。請妥善保管好本說明書，以便日后能隨時查閱。

## 部件名稱

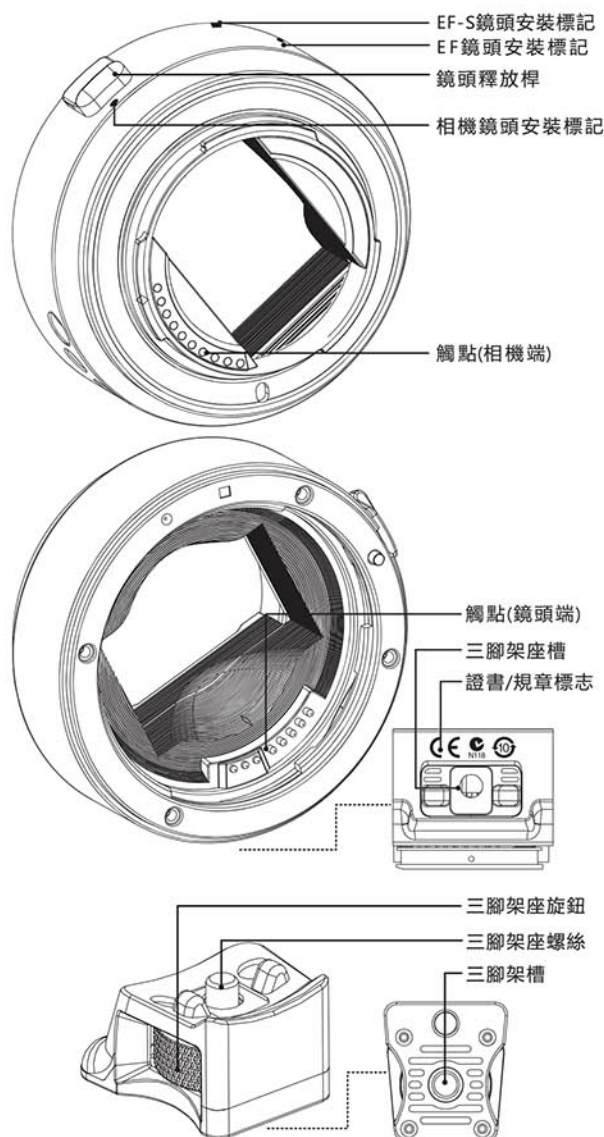


## 注意事項

### ● 使用此轉接環時的注意事項

1. 在NEX系列相機上如果不能使用，請將相機版本號更新為04以上。
2. 安裝卡口轉接環EF-NEXII鏡頭后，將設置從M模式轉換到A模式后，如果不能自動對焦，請重啟相機。
3. 將此轉接環連接至鏡頭並不會影響鏡頭的性能。
4. 請使用鏡頭上的開關來設置鏡頭功能。如果相機菜單中的設置與鏡頭上的設置不同，則應以鏡頭上的設置為準。
5. 當您使用的鏡頭比相機還要重時，在移動相機及進行拍攝時請務必握住鏡頭。由于鏡頭的最小對焦距離在連接此轉接環時將會增加，因此最大放大倍率和視野範圍可能會改變。
 
## 安裝和拆卸轉接環

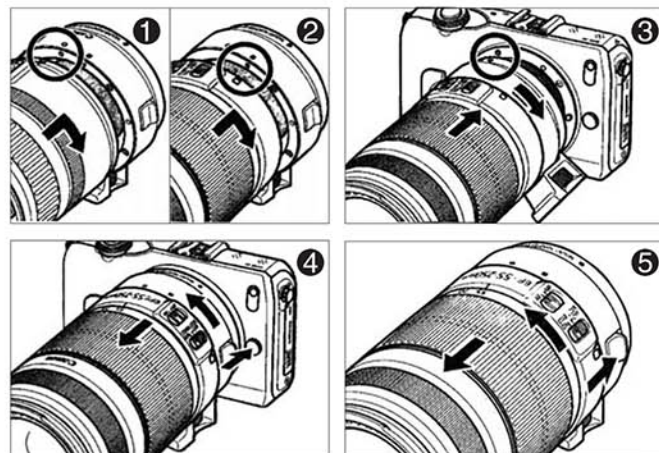

### ● 安裝程序

#### 1. 將EF鏡頭安裝到EF轉接環上的安裝槽

將EF鏡頭上的安裝標記(紅色圓圈)對準轉接環上的相同標記，然后以順時針方向轉動EF鏡頭直到聽到喀一聲為止。(1)

將EF-S鏡頭安裝到轉接環時，請對準EF-S安裝標記(白色方塊)

將鏡頭插入轉接環，然后以順時針方向轉動。(2)

#### 2. 將轉接環安裝到相機

將轉接環上的相機鏡頭安裝標記(白色圓圈)對準相機上的相同標記，將轉接環裝入相機，然后以逆時針方向轉動轉接環直到聽到喀一聲為止。(3)

### ● 拆卸程序

#### 1. 關閉相機電源，然后将仍安裝著EF鏡頭的轉接環從相機取下

按住相機的鏡頭釋放按鈕，同時以逆時針方向轉動轉接環。(4) 在轉接環停止轉動時將其取下。

#### 2. 將EF鏡頭從轉接環取下

按下轉接環上的鏡頭翻轉桿，同時以逆時針方向轉動EF鏡頭。(5) 在EF鏡頭停止轉動時將其取下。

#### 3. 搭配三腳架使用轉接環時的注意事項

當使用三腳架時行拍攝時，如果您已安裝轉接環，請勿使用相機的三腳架安裝槽，請務必使用轉接環隨附的三腳架座。

## 安裝三腳架

#### 1. 將隨附的三腳架座安裝到轉接環，並將三腳架座旋鈕旋緊。

請確定三腳架座與轉接環均朝向正確的方向。

#### 2. 使用三腳架座槽安裝三腳架

緊握住轉接環以穩固地安裝三腳架。

△ 在使用三腳架時，如果您的EF鏡頭(例如超長焦鏡頭)配備三腳架座，請務必使用此架座將鏡頭安裝到三腳架。

## 產品規格

兼容鏡頭	EF系列鏡頭
兼容相機	E卡口系列
正面安裝	佳能EF安裝相容
背面安裝	索尼E-MOUNT安裝相容
三腳架槽	CU 1/4" x 1
最大直徑及長度	66.6 x 26毫米
重量	約125克
前蓋	相機蓋
后蓋	鏡頭防塵蓋

列出的尺寸和重量指轉接環，上述所有數據均按照標準測量。產品規格和外觀如若改變，恕不另行通知。更多資訊請訪問：[www.protama-digital.com](http://www.protama-digital.com)